


Mounting of illuminated and not illuminated letters by means of plug and spacer sleeve




You will receive a drilling template from us, plug (pre-assembled) and spacer sleeves.



The plugs of the holding system are located on the back of the acrylic glued on.

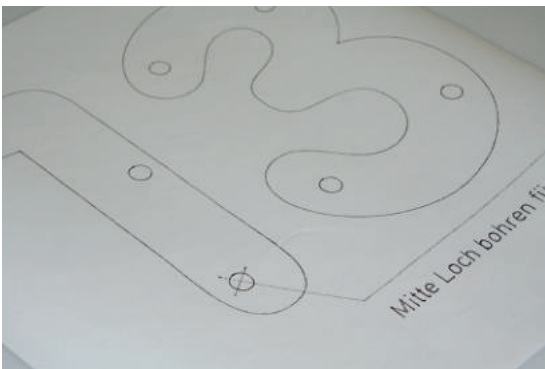

You drill the holes using the enclosed drilling the holes and screw the spacer sleeve to the wall. spacer sleeve to the wall.

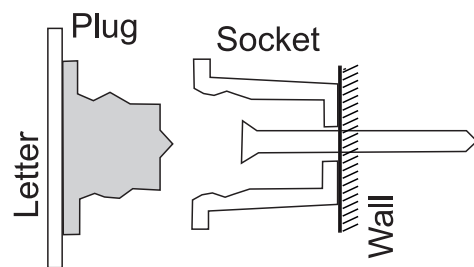

Then press the plug with the letter into the spacer sleeve, until it snaps into place.

The minimum bar width of the letter for this mounting system is 30 mm.

If the letters are to be illuminated, it is recommended to place the letters on a Dibond plate, so that the cables can disappear behind the plate and after the after wiring there is only one cable that needs to be connected.